

Tool Instruction A/C Flushing Kit

4328499R1

Tool Number: 19-000-03



0000415067

Figure 1. A/C Flushing Kit Contents

Purpose

This kit includes four flushing adapters for use with the newly designed evaporator and TXV valve seals on the LT™ Series and RH™ Series front and rear A/C systems. These adapters are designed to be used in conjunction with the current 19-000-01 and 19-000-02 A/C Flushing Kits.

Application(s)

2017 LT™ Series and RH™ Series

Application(s) (cont.)



GOVERNMENT REGULATION: Engine fluids (oil, fuel, and coolant) may be a hazard to human health and the environment. Handle all fluids and other contaminated materials (such as filters or rags) in accordance with applicable regulations. Recycle or dispose of engine fluids, filters, and other contaminated materials according to applicable regulations.



WARNING: To prevent personal injury and / or death, read all safety instructions in the “Safety Information” section of the *Engine Service Manual* or *Engine Diagnostic Manual* .



WARNING: To prevent property damage, personal injury, and / or death, park vehicle on hard flat surface, turn the engine off, set the parking brake, and install wheel chocks to prevent the vehicle from moving in either direction.



WARNING: To prevent personal injury and / or death, always wear safe eye protection when performing vehicle maintenance.



WARNING: To prevent property damage, personal injury, and / or death, inspect tool for wear / damage prior to use. Replace any worn or damaged components as necessary.

Tool Contents

Table 1

Image	Tool Number	Qty	Description
<p>0000415071</p>	19-094-03	1	Evaporator Adapter Tool (Front)
<p>0000415069</p>	19-632-03	1	Line Loop Tool (Front)

Tool Contents (cont.)

Table 1. (cont.)

Image	Tool Number	Qty	Description
<p>0000415070</p>	19-094-04	1	Evaporator Adapter Tool (Rear)
<p>0000415069</p>	19-632-04	1	Line Loop Tool (Rear)
<p>0000415068</p>	19-000-03-01	1	Case with Foam
<p>0000160075</p>	4328499R1	1	Tool Instruction

Instructions

1. Park vehicle on flat surface.
2. Shift transmission to Park or Neutral and set parking brake.
3. Install wheel chocks.
4. Perform HVAC system flush. For complete service procedure, refer to appropriate service manual.
5. Remove wheel chocks.

Care and Maintenance

- Keep tools clean and free of contaminants
- Inspect all fittings to ensure that ports and passages remain free of debris
- Replace any damaged components

Contact Information

If you would like to order additional tools or need replacement parts, please refer to the Navistar Service Tool Catalog. If you have questions, concerns, or feedback, please contact Navistar Service Tool Support Center:

- Submit a Service Tool iKNow Case File.
- Phone: 800-365-0088 (toll free).