

Tool Instruction Breakout Harness


4328557R1

0000431227

Tool Number: 12-166-02



 Figure 1. 12-166-02 Breakout Harness



Purpose

Essential tool utilized to test / diagnose the Engine Coolant Temperature Sensor.

1 Read all safety instructions in the "Safety Information" section of the appropriate Engine Service or Diagnostic Manual. Follow all warnings, cautions, and notes. ©2018 Navistar, Inc. All rights reserved. All marks are trademarks of their respective owners.

Application(s)

PSI 8.8L Engine

Additional Engine / Vehicle Applications May Apply

WARNING: To prevent personal injury and / or death, read all safety instructions in the "Safety Information" section of the Engine Service Manual or Engine Diagnostic Manual.

WARNING: To prevent property damage, personal injury, and / or death, park vehicle on hard flat surface, turn the engine off, set the parking brake, and install wheel chocks to prevent the vehicle from moving in either direction.

WARNING: To prevent personal injury and / or death, always wear safe eye protection when performing vehicle maintenance.

WARNING: To prevent property damage, personal injury, and / or death, inspect tool for wear / damage prior to use. Replace any worn or damaged components as necessary.

Tool Contents

Table 1

Image	Tool Number	Qty	Description
0000431228	12-166-02	1	Breakout Harness
0000160075	4328557R1	1	Tool Instruction

Instructions

NOTE: Please reference International[®] Service Portalsm regarding any possible revisions to this document.

1. Refer to appropriate service / diagnostic manual for detailed instruction.

Contact Information

If you would like to order additional tools or need replacement parts, please refer to the Navistar Service Tool Catalog. If you have questions, concerns, or feedback, please contact Navistar Service Tool Support Center:

- Submit a Service Tool iKNow Case File.
- Phone: 800-365-0088 (toll free).