

## Tool Instruction Breakout Harness

4328560R1


---

Tool Number: 15-124-02



0000431217

Figure 1. 15-124-02 Breakout Harness

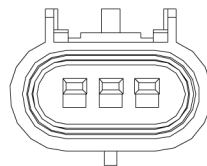

0000431327

### Purpose

Essential tool utilized to test / diagnose the Fuel Pressure Sensor.

### Application(s)

PSI 8.8L Engine

Additional Engine / Vehicle Applications May Apply

## Application(s) (cont.)

**⚠ WARNING:** To prevent personal injury and / or death, read all safety instructions in the “Safety Information” section of the *Engine Service Manual* or *Engine Diagnostic Manual*.



**⚠ WARNING:** To prevent property damage, personal injury, and / or death, park vehicle on hard flat surface, turn the engine off, set the parking brake, and install wheel chocks to prevent the vehicle from moving in either direction.

**⚠ WARNING:** To prevent personal injury and / or death, always wear safe eye protection when performing vehicle maintenance.

**⚠ WARNING:** To prevent property damage, personal injury, and / or death, inspect tool for wear / damage prior to use. Replace any worn or damaged components as necessary.

## Tool Contents

Table 1

| Image   | Tool Number | Qty | Description      |
|---|-------------|-----|------------------|
|  <p>0000431218</p>  | 15-124-02   | 1   | Breakout Harness |
|  <p>0000160075</p> | 4328560R1   | 1   | Tool Instruction |

## Instructions

**NOTE:** Please reference International® Service Portal<sup>sm</sup> regarding any possible revisions to this document.

1. Refer to appropriate service / diagnostic manual for detailed instruction.

## Contact Information

If you would like to order additional tools or need replacement parts, please refer to the Navistar Service Tool Catalog. If you have questions, concerns, or feedback, please contact Navistar Service Tool Support Center:

- Submit a Service Tool iKnow Case File.
- Phone: 800-365-0088 (toll free).