

Tool Instruction Clutch Installation and Removal Tool Kit

4328567R1

Tool Number: RR2000CL



0000431511

Figure 1. RR2000CL Clutch Installation and Removal Tool Kit

Purpose

Essential tool used for the installation and removal of the clutch found in the Eaton® Endurant™ Transmission.

Application(s)

International® LT®, RH™ and LoneStar® Series Vehicles

Application(s) (cont.)

Additional Vehicle Applications May Apply

! WARNING: To prevent personal injury and / or death, read all safety instructions in the “Safety Information” section of the *Engine Service Manual* or *Engine Diagnostic Manual*.



! WARNING: To prevent property damage, personal injury, and / or death, park vehicle on hard flat surface, turn the engine off, set the parking brake, and install wheel chocks to prevent the vehicle from moving in either direction.

! WARNING: To prevent personal injury and / or death, always wear safe eye protection when performing vehicle maintenance.

! WARNING: To prevent property damage, personal injury, and / or death, inspect tool for wear / damage prior to use. Replace any worn or damaged components as necessary.

Tool Contents

Table 1

Image	Tool Number	Qty	Description
 <p>0000431512</p>	RR2000CL	1	Clutch Installation and Removal Tool Kit (Includes P/N: RR1087TR, RR1063TR-3, RR1063TR-4)
 <p>0000160075</p>	4328567R1	1	Tool Instruction

Instructions

1. Refer to appropriate Eaton® Service Manual for detailed instructions.

Care and Maintenance

- Keep tools clean and free of contaminants
- Replace any damaged components

Contact Information

If you would like to order additional tools or need replacement parts, please refer to the Navistar Service Tool Catalog. If you have questions, concerns, or feedback, please contact Navistar Service Tool Support Center:

- Submit a Service Tool iKNow Case File.
- Phone: 800-365-0088 (toll free).