


# **Tool Instruction** M10 x 1.0 Adapter Fitting

4328625R1

Tool Number: 12-889-07

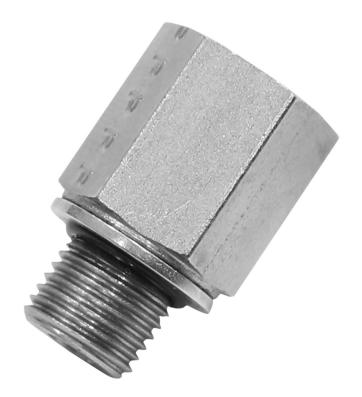

0000433394

Figure 1. 12-889-07 – M10 x 1.0 Adapter Fitting

#### Purpose

Essential tool used in combination with ZTSE1632, the M10 x 1.0 adapter fitting is installed in the engine oil pressure sensor port to prime the lubrication system.

### Application(s)

International® A26 Engine 2015 N13 Engine Additional Vehicle / Engine Applications May Apply

> 1 Read all safety instructions in the "Safety Information" section of the appropriate Engine Service or Diagnostic Manual. Follow all warnings, cautions, and notes.

©2018 Navistar, Inc. All rights reserved. All marks are trademarks of their respective owners.

## Application(s) (cont.)

**GOVERNMENT REGULATION:** Engine fluids (oil, fuel, and coolant) may be a hazard to human health and the environment. Handle all fluids and other contaminated materials (such as filters or rags) in accordance with applicable regulations. Recycle or dispose of engine fluids, filters, and other contaminated materials according to applicable regulations.

**WARNING:** To prevent personal injury and / or death, read all safety instructions in the "Safety Information" section of the *Engine Service Manual* or *Engine Diagnostic Manual*.

WARNING: To prevent property damage, personal injury, and / or death, park vehicle on hard flat surface, turn the engine off, set the parking brake, and install wheel chocks to prevent the vehicle from moving in either direction.

WARNING: To prevent personal injury and / or death, always wear safe eye protection when performing vehicle maintenance.

WARNING: To prevent property damage, personal injury, and / or death, inspect tool for wear / damage prior to use. Replace any worn or damaged components as necessary.

#### **Tool Contents**

Table 1

Image	Tool Number	Qty	Description
0000433393	12-889-07	1	M10 x 1.0 Adapter Fitting
0000160075	4328625R1	1	Tool Instruction

#### Instructions

- 1. Park vehicle on flat surface.
- 2. Shift vehicle into Park or Neutral and set parking brake.
- 3. Turn ignition to Key OFF position.
- 4. Install wheel chocks.
- 5. Prime engine. Refer to Engine Oil Priming Procedure in appropriate Service Manual for detailed instructions.
- 6. Remove wheel chocks.

#### **Care and Maintenance**

- Keep tools clean and free of contaminants
- · Replace any damaged components

#### **Contact Information**

If you would like to order additional tools or need replacement parts, please refer to the Navistar Service Tool Catalog. If you have questions, concerns, or feedback, please contact Navistar Service Tool Support Center:

- Submit a Service Tool iKNow Case File.
- Phone: 800-365-0088 (toll free).