

Tool Instruction Crankshaft Rear Oil Seal Remover

4328641R1

Tool Number: J-44641



0000434241

Figure 1. J-44641 — Crankshaft Rear Oil Seal Remover

Purpose

Essential tool used to remove the rear crankshaft oil seal.

NOTE: The plate and screw assembly from this tool is also used with the Crankshaft Front Oil Seal Remover (J-44544).

Application(s)

International[®] 6.6 Engine

Additional vehicle / engine applications may apply

Application(s) (cont.)



GOVERNMENT REGULATION: Engine fluids (oil, fuel, and coolant) may be a hazard to human health and the environment. Handle all fluids and other contaminated materials (such as filters or rags) in accordance with applicable regulations. Recycle or dispose of engine fluids, filters, and other contaminated materials according to applicable regulations.



WARNING: To prevent personal injury and / or death, read all safety instructions in the “Safety Information” section of the *Engine Service Manual* or *Engine Diagnostic Manual*.



WARNING: To prevent property damage, personal injury, and / or death, park vehicle on hard flat surface, turn the engine off, set the parking brake, and install wheel chocks to prevent the vehicle from moving in either direction.



WARNING: To prevent personal injury and / or death, always wear safe eye protection when performing vehicle maintenance.



WARNING: To prevent property damage, personal injury, and / or death, inspect tool for wear / damage prior to use. Replace any worn or damaged components as necessary.

Tool Contents

Table 1

Image	Tool Number	Qty	Description
<p>0000434243</p>	J-44641	1	Crankshaft Rear Oil Seal Remover
<p>0000160075</p>	4328641	1	Tool Instruction

Instructions

NOTE: Please reference International® Service PortalSM regarding any possible revisions to this document.

1. Park vehicle on flat surface.
2. Shift transmission into Park or Neutral and set parking brake.
3. Turn ignition to Key OFF position.
4. Install wheel chocks.
5. Access and remove rear crankshaft oil seal. Discard seal. Refer to appropriate Service Manual for detailed instructions.
6. Install new rear crankshaft oil seal and complete service procedure as indicated in appropriate Service Manual.
7. Remove wheel chocks.

Care and Maintenance

- Keep tools clean and free of contaminants
- Replace any damaged components

Contact Information

If you would like to order additional tools or need replacement parts, please refer to the Navistar Service Tool Catalog. If you have questions, concerns, or feedback, please contact Navistar Service Tool Support Center:

- Submit a Service Tool iKNow Case File.
- Phone: 800-365-0088 (toll free).