












Tool Instruction

Addendum – Lid Label / Terminal Release Tool

4328650R1

Tool Number: 0000360981R4 / 408575

NAVISTAR®		Medium Duty Engine Electrical Harness Repair Kit		Drawer B	
 <p>TXT126870162 (2ea) Use Pigtail TXT126870165 Tool 49304, 49305 and Pin Sizing Tool TXT126870176</p>	 <p>TXT126870146 (2ea) AC Resistor Connector Assembly Includes Mating Connector TXT126870235 and Lock Use Pigtail TXT126870226 and Tool 408575</p>	 <p>TXT126870156 (2ea) Use Pigtail TXT126870179/259 Tool 49304, 49305 and Pin Sizing Tool TXT126870175</p>	 <p>TXT126870163 (2ea) Use Pigtail TXT126870168 with Terminal Release Tools 49304, 49305 and Pin Sizing Tool TXT126870176</p>		
 <p>TXT126870151 (2ea) Use Pigtail TXT126870166 with Terminal Release Tools 49304, 49305 and Pin Sizing Tool TXT126870176</p>	 <p>TXT126870161 (2ea) Use Pigtail TXT126870172 with Terminal Release Tools 49304 and Pin Sizing Tool TXT126870176</p>	 <p>TXT126870272 49303 49304 49305 49306 401714 405780 405784 408575 TERMINAL TOOLS</p>			
		 <p>TXT126870177 (4ea) (Comes as assembly) Use Pin Sizing Tool TXT126870173</p>			
 <p>TXT126870174 Loom Splitter</p>		 <p>TXT126870176 (.025) TXT126870175 (.032) TXT126870173 (.040) Pin Sizing Probe Adapters</p>			

Missing a manual? Reprint a manual from iKNow To reorder please navigate to: Service Portal>Service Reference>Service Tools Ordering & Support>Tool Catalog

0000434579

Figure 1. 0000360981R4 - Lid Label / 408575 – Terminal Release Tool

Purpose

Update existing Medium Duty Electrical Harness Repair Kit with new Lid Label and Terminal Release Tool.

Application(s)

International® 6.6 Engine

Application(s) (cont.)



GOVERNMENT REGULATION: Engine fluids (oil, fuel, and coolant) may be a hazard to human health and the environment. Handle all fluids and other contaminated materials (such as filters or rags) in accordance with applicable regulations. Recycle or dispose of engine fluids, filters, and other contaminated materials according to applicable regulations.



WARNING: To prevent personal injury and / or death, read all safety instructions in the “Safety Information” section of the *Engine Service Manual* or *Engine Diagnostic Manual*.



WARNING: To prevent property damage, personal injury, and / or death, park vehicle on hard flat surface, turn the engine off, set the parking brake, and install wheel chocks to prevent the vehicle from moving in either direction.






WARNING: To prevent personal injury and / or death, always wear safe eye protection when performing vehicle maintenance.



WARNING: To prevent property damage, personal injury, and / or death, inspect tool for wear / damage prior to use. Replace any worn or damaged components as necessary.

Tool Contents

Table 1

Image	Tool Number	Qty	Description
 <p>0000434578</p>	0000360981R4	1	Lid Label
 <p>0000434580</p>	408575	1	Terminal Release Tool
 <p>0000160075</p>	4328650R1	1	Tool Instruction

Instructions

NOTE: Please reference International® Service PortalSM regarding any possible revisions to this document.

1. Locate Medium Duty Electrical Harness Repair Kit (P/N ITWX4048).
2. Open drawer B.
3. Replace existing Lid Label with new Lid Label (P/N 0000360981R4) provided in current shipment.
4. Place Terminal Release Tool (P/N 408575) provided in current shipment in “Terminal Tool” pocket of drawer B.

Care and Maintenance

- Keep tools clean and free of contaminants
- Replace any damaged components

Contact Information

If you would like to order additional tools or need replacement parts, please refer to the Navistar Service Tool Catalog. If you have questions, concerns, or feedback, please contact Navistar Service Tool Support Center:

- Submit a Service Tool iKNow Case File.
- Phone: 800-365-0088 (toll free).