

Tool Instruction Fuel System Block Off Set

4328672R1

Tool Number: 15-643-02



0000448535

Figure 1. 15-643-02 – Fuel System Block Off Set

Purpose

Used to block off fuel lines and solenoid valves during service of the fuel system.

Application(s)

2019 PSI 8.8L Propane

Additional Vehicle / Engine Applications May Apply

Application(s) (cont.)



GOVERNMENT REGULATION: Engine fluids (oil, fuel, and coolant) may be a hazard to human health and the environment. Handle all fluids and other contaminated materials (such as filters or rags) in accordance with applicable regulations. Recycle or dispose of engine fluids, filters, and other contaminated materials according to applicable State and Federal regulations.



WARNING: To prevent personal injury, and / or death, or property damage, read all safety instructions in the “Safety Information” section of the *Engine Service Manual* or *Engine Diagnostic Manual*.



WARNING: To prevent personal injury, and / or death, or property damage, park vehicle on hard flat surface, turn the engine off, set the parking brake, and install wheel chocks to prevent the vehicle from moving in either direction.





WARNING: To prevent personal injury and / or death, always wear safe eye protection when performing vehicle maintenance.



WARNING: To prevent personal injury, and / or death, or property damage, inspect tool for wear / damage prior to use. Replace any worn or damaged components as necessary.

Tool Contents

Table 1

Image	Tool Number	Qty	Description
 <p>0000448537</p>	15-643-02	1	Fuel System Block Off Plug / Cap Set
 <p>0000160075</p>	4328672R1	1	Tool Instruction

Tool Contents (cont.)

Instructions

NOTE: Please reference International® Service PortalSM regarding any possible revisions to this document.

1. Park vehicle on a flat surface.
2. Shift transmission into Park or Neutral and set parking brake.
3. Turn ignition to Key OFF position.
4. Install wheel chocks.
5. Block off fuel lines and solenoid valves; refer to appropriate Service Manual for detailed instructions.
6. Perform desired fuel system service procedure; refer to appropriate Service Manual for detailed instructions.
7. Remove wheel chocks.

Care and Maintenance

- Keep tools clean and free of contaminants
- Replace any damaged components

Contact Information

If you would like to order additional tools or need replacement parts, please refer to the Navistar Service Tool Catalog. If you have questions, concerns, or feedback, please contact Navistar Service Tool Support Center:

- Submit a Service Tool iKNow Case File.
- Phone: 800-365-0088 (toll free).