

# Tool Instruction

## 16-Pin Breakout Harness

---

4328915R1

Tool Number: 13-334-01



0000480624

**Figure 1. 13-334-01 Breakout Harness**



### **Purpose**

Used to test and diagnose various electrical circuits.

### **Application(s)**

International® T14 Transmission. Other applications may apply.

## Tool Contents

Image	Tool Number	Qty	Description
 <p>0000480625</p>	13-334-01	1	16-Pin Breakout Harness
 <p>0000160075</p>	4328915R1	1	Tool Instruction

## Instructions

**IMPORTANT:** Please reference International® Service Portal<sup>SM</sup> regarding any possible revisions to this document.

Refer to appropriate Service Manual for detailed instructions.

**! WARNING:** To prevent personal injury and / or death, or damage to property, read all safety instructions in the “Safety Information” section of the *Engine Service Manual* or *Engine Diagnostic Manual*.

**! WARNING:** To prevent personal injury, and / or death, or damage to property, park vehicle on hard flat surface, turn the engine off, set the parking brake, and install wheel chocks to prevent the vehicle from moving in either direction.

**! WARNING:** To prevent personal injury and / or death, always wear safe eye protection when performing vehicle maintenance.

**! WARNING:** To prevent personal injury, and / or death, or damage to property, inspect tool for wear / damage prior to use. Replace any worn or damaged components as necessary.

## **Care and Maintenance**

- Keep tools clean and free of contaminants.
- Replace any damaged components.

## **Contact Information**

If you would like to order additional tools or need replacement parts, please refer to the Navistar Service Tool Catalog. If you have questions, concerns, or feedback, please contact Navistar Service Tool Support Center:

- Submit a Service Tool iKNow Case File.
- Phone: 800-365-0088 (toll free).